


when the amplifier no power and the transistors are OK < then these two small capacitors need to be changed. normally they are bubbled.

OTHER PROBLEMS, THEN WOULD BE THE TRANSISTORS.



when you have a flashing red light. this is normally the issue.

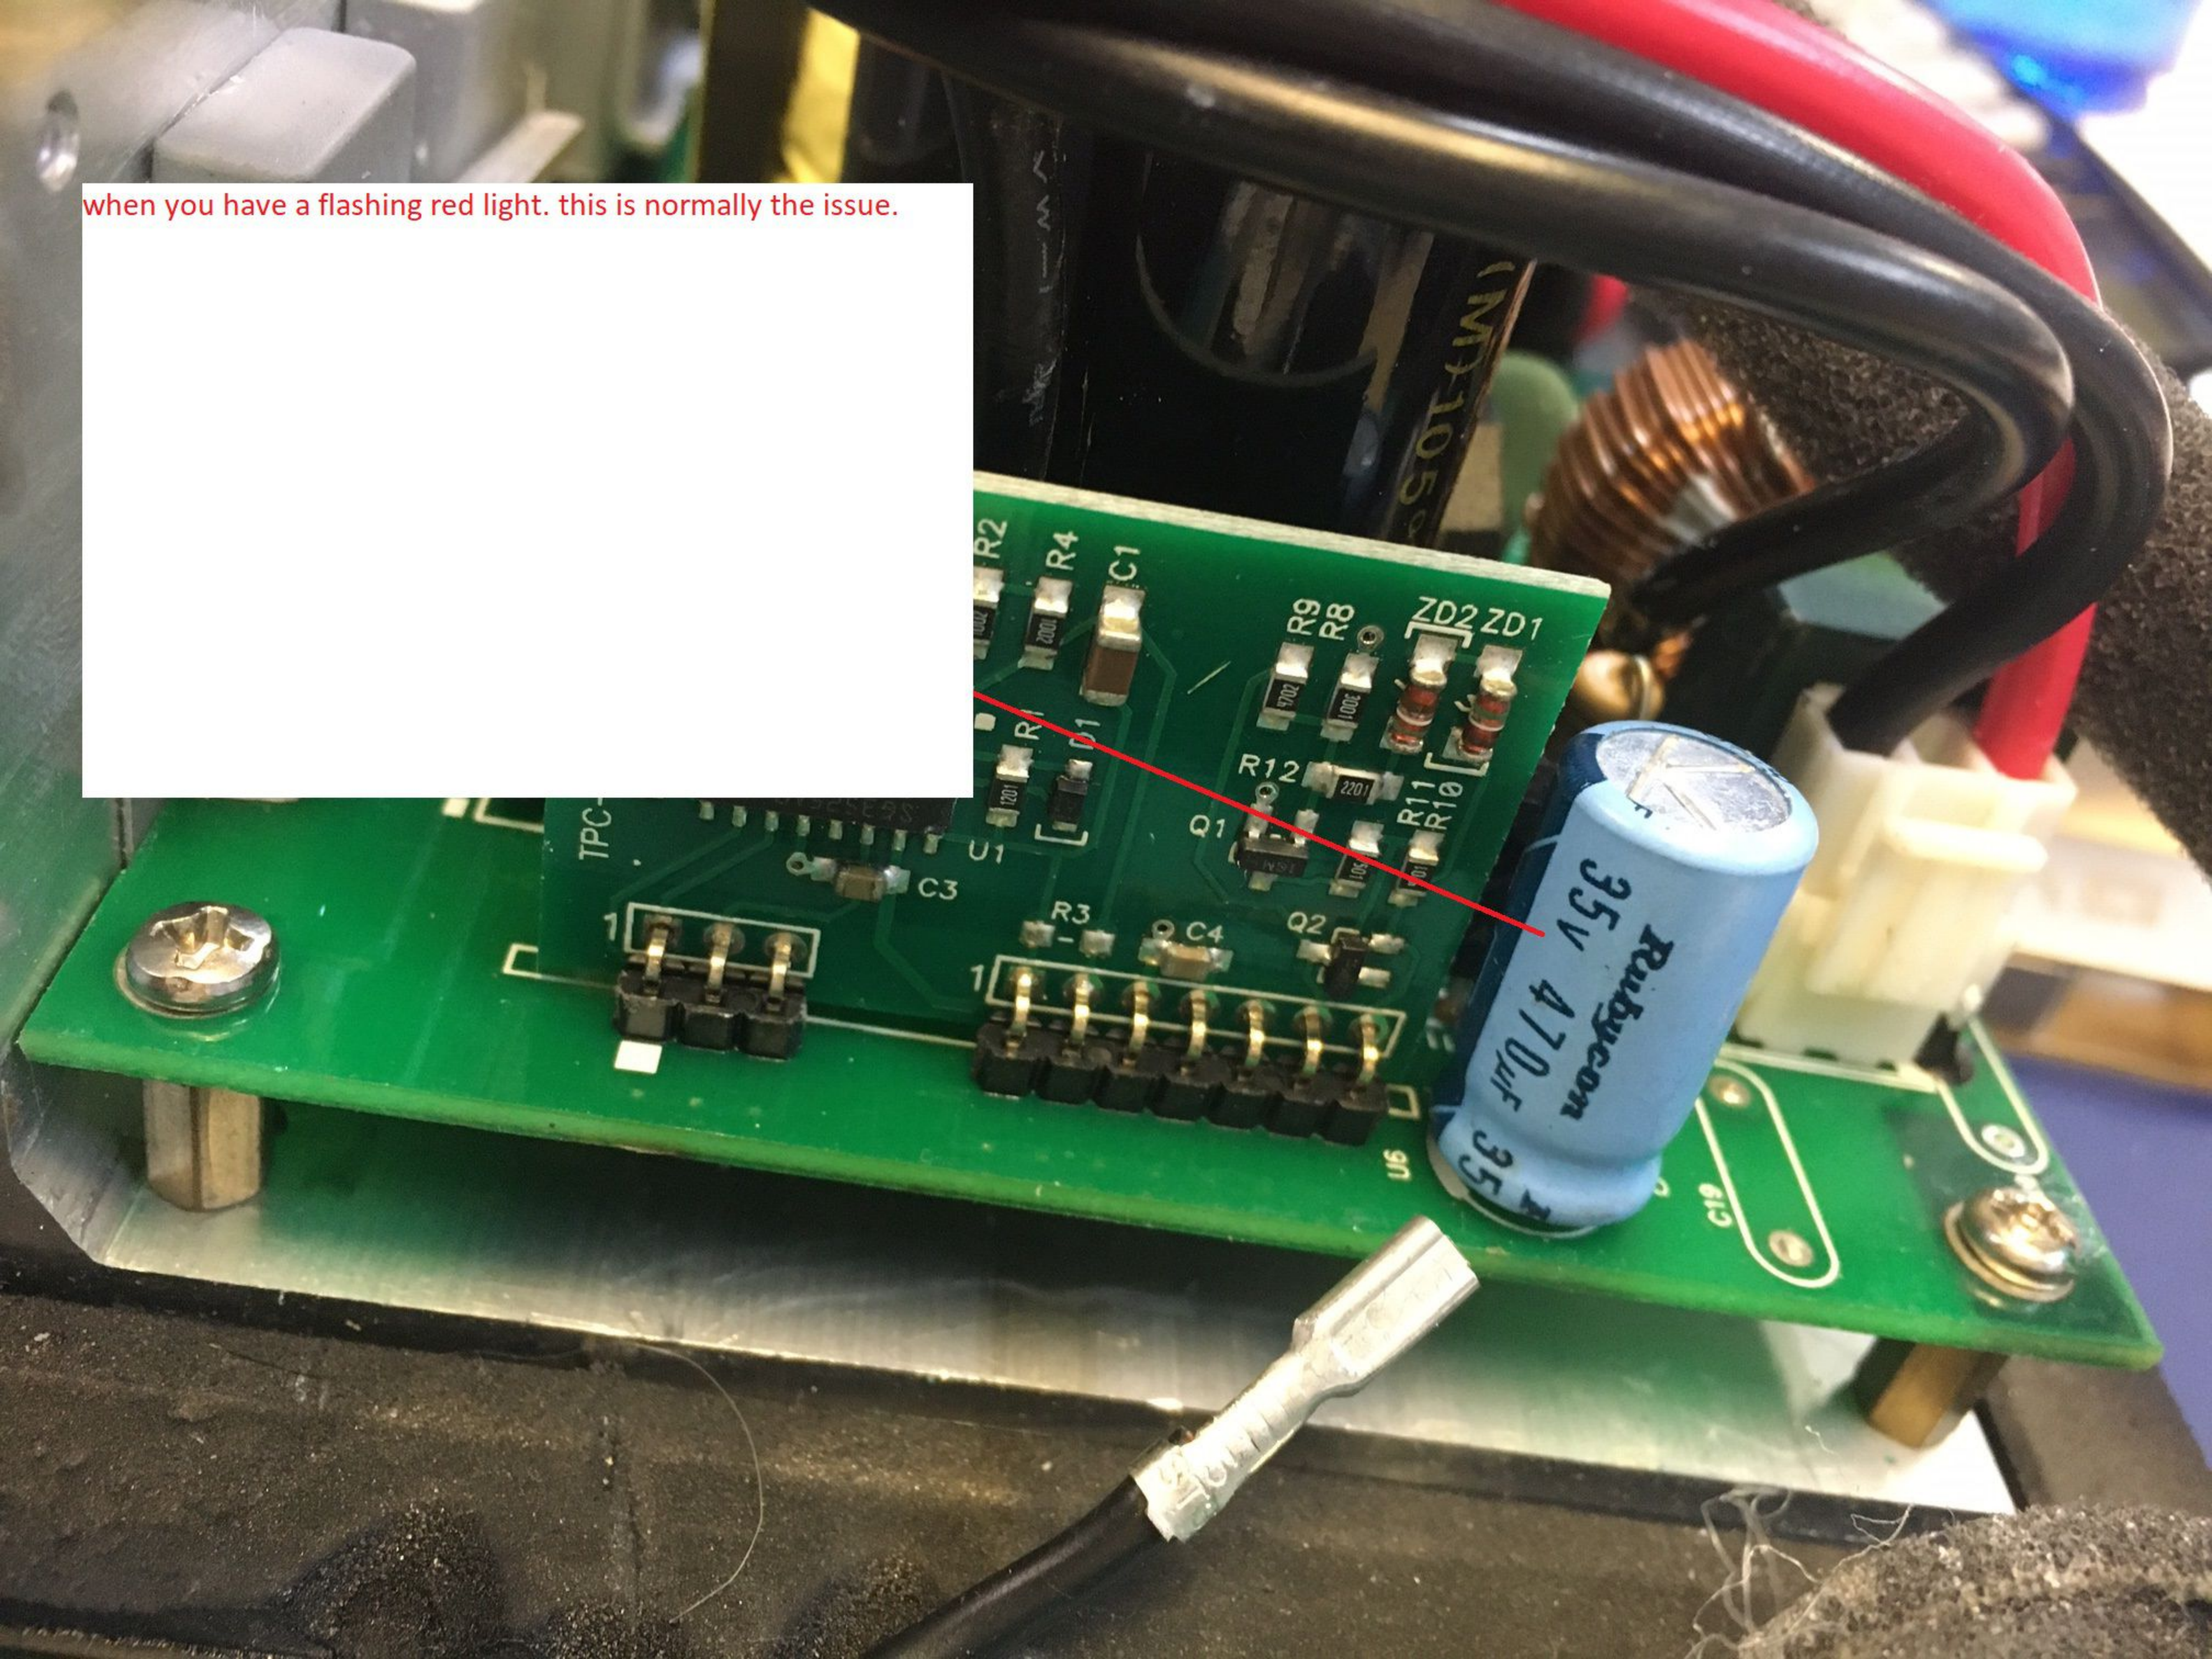

WHEN THE AMPLIFIER SOLID RED LIGHT THEN YOU CHANGE IC U4

